- 1. \checkmark : means that the system has this function
- 2. -: means that the system does not have this function
- 3. compared with the last version, the new added function is marked in red color.

		System	Function							
Vehicle	Area		Read Info.	Read DTC	Clear DTC	Data Stream	Actuation Test	Special Function	Remark	
HONDA	Canada	Engine System	_	√	√	√	√	√		
HONDA	Canada	Automatic Transmission System	_	√	√	√	√	√		
HONDA	Canada	Supplemental Inflatable Restraint System	√	√	√	√	√	√		
HONDA	Canada	Anti-lock Braking System	_	√	√	√	√	√		
HONDA	Canada	Brake System	_	√	√	√	√	√		
HONDA	Canada	Driving Support	_	√	√	√	√	√		
HONDA	Canada	Body Electric System	-	√	√	√	√	√		
HONDA	Canada	Electric Power Steering	_	√	√	√	√	_		
HONDA	Canada	Tire Pressure Monitor System	_	√	√	√	√	_		
HONDA	Canada	SH-AWD	_	√	√	√	√	_		
HONDA	Canada	SMART-H	_	√	√	√	√	_		
HONDA	Canada	Immobilizer System	_	_	-	√	_	_		
HONDA	Canada	Integrated Motor Assist System	-	√	√	√	√	√		
HONDA	Canada	VTM 4	_	√	√	√	_	_		
HONDA	Canada	Adaptive Cruise Control	_	√	√	√	√	_		
HONDA	Canada	Hydraulic Booster	_	√	√	√	√	_		
HONDA	Canada	Electric Vacuum Pump System	_	√	√	√	-	_		
HONDA	Canada	Pop-up Engine Cover	_	√	√	√	_	_		
HONDA	Canada	Active Shock Absorber System	_	√	√	√	-	_		
HONDA	Canada	Active Engine Control Mount	-	√	√	√	√	_		
HONDA	Canada	Active Damper System	_	√	√	√	-	_		
HONDA	Canada	Real Time AWD	-	√	√	√	-	√		
HONDA	Canada	Acoustic Vehicle Alerting System	-	√	√	√	-	-		

- 1. \checkmark : means that the system has this function
- 2. -: means that the system does not have this function
- 3. compared with the last version, the new added function is marked in red color.

		System	Function							
Vehicle	Area		Read Info.	Read DTC	Clear DTC	Data Stream	Actuation Test	Special Function	Remark	
HONDA	Canada	CAN Gateway	-	√	√		-	-		
HONDA	Canada	Precision All Wheel Steer	_	√	√	√	√	√		
HONDA	Canada	EDLC	_	√	√	√	√	-		
HONDA	Canada	R/C ENG Starter	_	-	_	√	_	ı		
HONDA	Canada	SVT	_	√	√	√	√	√		
HONDA	Europ	Engine System	_	√	√	√	√	√		
HONDA	Europ	Automatic Transmission System	_	√	√	√	√	√		
HONDA	Europ	Supplemental Inflatable Restraint System	√	√	√	√	√	√		
HONDA	Europ	Anti-lock Braking System	-	√	√	√	√	√		
HONDA	Europ	Body Electric System	_	√	√	√	√	√		
HONDA	Europ	Electric Power Steering	-	√	√	√	√	-		
HONDA	Europ	Tire Pressure Monitor System	_	√	√	√	√	_		
HONDA	Europ	SH-AWD	-	√	√	√	√	-		
HONDA	Europ	SMART-H	_	√	√	√	√	_		
HONDA	Europ	Immobilizer System	_	-	-	√	_	-		
HONDA	Europ	Integrated Motor Assist System	_	√	√	√	√	√		
HONDA	Europ	VTM 4	_	√	√	√	_	-		
HONDA	Europ	Adaptive Cruise Control	_	√	√	√	√	-		
HONDA	Europ	Hydraulic Booster	_	√	√	√	√	ı		
HONDA	Europ	Electric Vacuum Pump System	-	√	√	√	-	1		
HONDA	Europ	Pop-up Engine Cover	_	√	√	√	-	ı		
HONDA	Europ	Active Shock Absorber System	-	√	√	√	-	-		
HONDA	Europ	Brake System	-	√	√	√	√	√		

- 1. \checkmark : means that the system has this function
- 2. -: means that the system does not have this function
- 3. compared with the last version, the new added function is marked in red color.

		System	Function							
Vehicle	Area		Read Info.	Read DTC	Clear DTC	Data Stream	Actuation Test	Special Function	Remark	
HONDA	Europ	Driving Support	-	√	√	√	√	√		
HONDA	Europ	Active Damper System	_	√	√	√	_	-		
HONDA	Europ	Real Time AWD	_	√	√	√	_	√		
HONDA	Europ	Acoustic Vehicle Alerting System	_	√	√	√	_	-		
HONDA	Europ	CAN Gateway	_	√	√	-	_	_		
HONDA	Europ	Precision All Wheel Steer	_	√	√	√	√	√		
HONDA	Europ	EDLC	-	√	√	√	√	_		
HONDA	Europ	Active Engine Control Mount	-	√	√	√	√	-		
HONDA	Europ	4ws	-	√	√	√	√	√		
HONDA	Europ	i-Shift	_	√	√	√	_	_		
HONDA	Europ	SVT	-	√	√	√	_	_		
HONDA	General	Engine System	-	√	√	√	√	√		
HONDA	General	Automatic Transmission System	-	√	√	√	√	√		
HONDA	General	Supplemental Inflatable Restraint System	√	√	√	√	√	√		
HONDA	General	Anti-lock Braking System	-	√	√	√	√	√		
HONDA	General	Body Electric System	_	√	√	√	√	√		
HONDA	General	Electric Power Steering	-	√	√	√	√	-		
HONDA	General	Tire Pressure Monitor System	-	√	√	√	√	_		
HONDA	General	SH-AWD	-	√	√	√	√	-		
HONDA	General	SMART-H	-	√	√	√	√	_		
HONDA	General	Immobilizer System	_	-	-	√	_	-		
HONDA	General	Integrated Motor Assist System	-	√	√	√	√	√		
HONDA	General	VTM 4	_	√	√	√	_	_		

- 1. \checkmark : means that the system has this function
- 2. -: means that the system does not have this function
- 3. compared with the last version, the new added function is marked in red color.

		System	Function							
Vehicle	Area		Read Info.	Read DTC	Clear DTC	Data Stream	Actuation Test	Special Function	Remark	
HONDA	General	Adaptive Cruise Control	-	√	√	√	√	-		
HONDA	General	Hydraulic Booster	_	√	√	√	√	_		
HONDA	General	Electric Vacuum Pump System	_	√	√	√	_	_		
HONDA	General	Pop-up Engine Cover	_	√	√	√	_	_		
HONDA	General	Active Shock Absorber System	-	√	√	√	-	_		
HONDA	General	Active Engine Control Mount	-	√	√	√	√	_		
HONDA	General	Brake System	-	√	√	√	√	√		
HONDA	General	Driving Support	-	√	√	√	√	√		
HONDA	General	Active Damper System	-	√	√	√	_	_		
HONDA	General	Real Time AWD	_	√	√	√	_	√		
HONDA	General	Acoustic Vehicle Alerting System	-	√	√	√	_	_		
HONDA	General	CAN Gateway	_	√	√	-	_	_		
HONDA	General	Precision All Wheel Steer	-	√	√	√	√	√		
HONDA	General	EDLC	-	√	√	√	√	_		
HONDA	General	Active Engine Control Mount	-	√	√	√	√	_		
HONDA	General	4ws	-	√	√	√	√	√		
HONDA	General	R/C ENG Starter	-	_	_	√	_	_		
HONDA	General	SVT	-	√	√	√	_	_		
HONDA	Japan	Engine System	_	√	√	√	√	√		
HONDA	Japan	Automatic Transmission System	_	√	√	√	√	√		
HONDA	Japan	Supplemental Inflatable Restraint System	√	√	√	√	√	√		
HONDA	Japan	Anti-lock Braking System	-	√	√	√	√	√		
HONDA	Japan	Body Electric System	-	√	√	√	√	√		

- 1. \checkmark : means that the system has this function
- 2. -: means that the system does not have this function
- 3. compared with the last version, the new added function is marked in red color.

		System	Function							
Vehicle	Area		Read Info.	Read DTC	Clear DTC	Data Stream	Actuation Test	Special Function	Remark	
HONDA	Japan	Electric Power Steering	_	√	√	√	√	_		
HONDA	Japan	Tire Pressure Monitor System	_	√	√	√	√	-		
HONDA	Japan	SH-AWD	_	√	√	√	√	_		
HONDA	Japan	SMART-H	_	√	√	√	√	-		
HONDA	Japan	Immobilizer System	_	_	_	√	_	_		
HONDA	Japan	Integrated Motor Assist System	_	√	√	√	√	√		
HONDA	Japan	VTM 4	_	√	√	√	_	_		
HONDA	Japan	Adaptive Cruise Control	_	√	√	√	√	-		
HONDA	Japan	Hydraulic Booster	_	√	√	√	√	-		
HONDA	Japan	Electric Vacuum Pump System	_	√	√	√	_	-		
HONDA	Japan	Pop-up Engine Cover	_	√	√	√	_	-		
HONDA	Japan	Active Shock Absorber System	_	√	√	√	_	-		
HONDA	Japan	Active Engine Control Mount	_	√	√	√	√	-		
HONDA	Japan	Brake System	_	√	√	√	√	√		
HONDA	Japan	Driving Support	_	√	√	√	√	√		
HONDA	Japan	Active Damper System	_	√	√	√	_	ı		
HONDA	Japan	Real Time AWD	_	√	√	√	_	√		
HONDA	Japan	Acoustic Vehicle Alerting System	_	√	√	√	_	ı		
HONDA	Japan	CAN Gateway	_	√	√	-	_	-		
HONDA	Japan	Precision All Wheel Steer	_	√	√	√	√	√		
HONDA	Japan	EDLC	_	√	√	√	√	-		
HONDA	Japan	Active Engine Control Mount	_	√	√	√	√	_		
HONDA	Japan	4ws	_	√	√	√	√	√		

- 1. \checkmark : means that the system has this function
- 2. -: means that the system does not have this function
- 3. compared with the last version, the new added function is marked in red color.

		System	Function							
Vehicle	Area		Read Info.	Read DTC	Clear DTC	Data Stream	Actuation Test	Special Function	Remark	
HONDA	Japan	R/C ENG Starter	-	-	-	√	-	1		
HONDA	Japan	SVT	_	√	√	√	_	-		
HONDA	Latin America	Engine System	_	√	√	√	√	√		
HONDA	Latin America	Automatic Transmission System	_	√	√	√	√	√		
HONDA	Latin America	Supplemental Inflatable Restraint System	√	√	√	√	√	√		
HONDA	Latin America	Anti-lock Braking System	-	√	√	√	√	√		
HONDA	Latin America	Body Electric System	-	√	√	√	√	√		
HONDA	Latin America	Electric Power Steering	-	√	√	√	√	_		
HONDA	Latin America	Tire Pressure Monitor System	-	√	√	√	√	-		
HONDA	Latin America	SH-AWD	-	√	√	√	√	_		
HONDA	Latin America	SMART-H	-	√	√	√	√	-		
HONDA	Latin America	Immobilizer System	_	_	_	√	_	_		
HONDA	Latin America	Integrated Motor Assist System	-	√	√	√	√	√		
HONDA	Latin America	VTM 4	-	√	√	√	_	_		
HONDA	Latin America	Adaptive Cruise Control	-	√	√	√	√	_		
HONDA	Latin America	Hydraulic Booster	-	√	√	√	√	_		
HONDA	Latin America	Electric Vacuum Pump System	-	√	√	√	_	_		
HONDA	Latin America	Pop-up Engine Cover	-	√	√	√	-	_		
HONDA	Latin America	Active Shock Absorber System	-	√	√	√	-	=		
HONDA	Latin America	Active Engine Control Mount	_	√	√	√	√	_		
HONDA	Latin America	Brake System	-	√	√	√	√	√		
HONDA	Latin America	Driving Support	-	√	√	√	√	√		
HONDA	Latin America	Active Damper System	-	√	√	√	-	-	_	

- 1. \checkmark : means that the system has this function
- 2. -: means that the system does not have this function
- 3. compared with the last version, the new added function is marked in red color.

		System	Function							
Vehicle	Area		Read Info.	Read DTC	Clear DTC	Data Stream	Actuation Test	Special Function	Remark	
HONDA	Latin America	Real Time AWD	-	√	√	√	_	√		
HONDA	Latin America	Acoustic Vehicle Alerting System	_	√	√	√	_	-		
HONDA	Latin America	CAN Gateway	_	√	√	-	_	-		
HONDA	Latin America	Precision All Wheel Steer	-	√	√	√	√	√		
HONDA	Latin America	EDLC	-	√	√	√	√	_		
HONDA	Latin America	Active Engine Control Mount	-	√	√	√	√	-		
HONDA	Latin America	R/C ENG Starter	-	_	-	√	_	-		
HONDA	Latin America	SVT	-	√	√	√	-	-		
HONDA	United States	Engine System	-	√	√	√	√	√		
HONDA	United States	Automatic Transmission System	-	√	√	√	√	√		
HONDA	United States	Supplemental Inflatable Restraint System	√	√	√	√	√	√		
HONDA	United States	Anti-lock Braking System	_	√	√	√	√	√		
HONDA	United States	Body Electric System	-	√	√	√	√	√		
HONDA	United States	Electric Power Steering	-	√	√	√	√	-		
HONDA	United States	Tire Pressure Monitor System	-	√	√	√	√	-		
HONDA	United States	SH-AWD	-	√	√	√	√	_		
HONDA	United States	SMART-H	-	√	√	√	√	-		
HONDA	United States	Immobilizer System	-	-	-	√	-	-		
HONDA	United States	Integrated Motor Assist System	_	√	√	√	√	√		
HONDA	United States	VTM 4	_	√	√	√	-	-		
HONDA	United States	Adaptive Cruise Control	-	√	√	√	√	-		
HONDA	United States	Hydraulic Booster	_	√	√	√	√	-		
HONDA	United States	Electric Vacuum Pump System	-	√	√	√	-	-		

- 1. \checkmark : means that the system has this function
- 2. -: means that the system does not have this function
- 3. compared with the last version, the new added function is marked in red color.

				Function							
Vehicle	Area	System	Read Info.	Read DTC	Clear DTC	Data Stream	Actuation Test	Special Function	Remark		
HONDA	United States	Pop-up Engine Cover	-	√	√	√	_	ı			
HONDA	United States	Active Shock Absorber System	_	√	√	√	_	ı			
HONDA	United States	Active Engine Control Mount	_	√	√	√	√	ı			
HONDA	United States	Brake System	_	√	√	√	√	√			
HONDA	United States	Driving Support	_	√	√	√	√	√			
HONDA	United States	Active Damper System	_	√	√	√	_	-			
HONDA	United States	Real Time AWD	_	√	√	√	_	√			
HONDA	United States	Acoustic Vehicle Alerting System	_	√	√	√	_	-			
HONDA	United States	CAN Gateway	-	√	√	-	_				
HONDA	United States	Precision All Wheel Steer	_	√	√	√	√	√			
HONDA	United States	EDLC	_	√	√	√	√	-			
HONDA	United States	Active Engine Control Mount	_	√	√	√	√	ı			
HONDA	United States	R/C ENG Starter	_	-	-	√	_	-			
HONDA	United States	SVT	-	√	√	√	-	ı			