- 1.  $\checkmark$  : means that the system has this function
- 2. -: means that the system does not have this function
- 3. compared with the last version, the new added function is marked in red color.

Systems	Function								
	ECU information	Read fault codes	Clear fault codes	Read data stream	Actuation test	Programming		Remark	
Brake system   ABSC	-	_	_	-	-	_	-	_	
Brake system   ABSD	-	√	√	√	√	=	-	_	
Brake system   ABSE	-	-	_	-	-	-	_	_	
Brake system   ABSE2	√	√	√	√	√	_	1	_	
Brake system   ABSE4	-		_	_	√	_	-	_	
Safety system   ACC	√	√	√		_	_	1	_	
CAB climate system   ACHEA	√	√	√	√	√	_	-	_	
CAB climate system   ACHEW	√	√	√	√	√	_	√	-	
CAB climate system   ACHW2	√	√	√	√	√	_	√	_	
CAB climate system   ACHW3	√	√	√	√	√	_	-	_	
Safety system   AEBS / ACC	√	√	√	√	√				
Supplementary vehicle system   AGS	-	1	_	ı	-	-	I	-	
Safety system   AIRBAG	√	√	√	√	√	_	-	_	
Safety system   AIRBAG2	√	√	√	-	-	_	-	_	
Safety system   AIRBAG3	√	√	√	_	-	-	=	-	
Security system   ALSE	-	-	_	-	-	_	-	_	
Security system   ALSS	√	√	√	√	-	=	=	-	
Engine system   ASLG	-	=	=	-	-	=	=	-	
Engine system   ASLV	-	=	=	=	-	=	=	-	
Transmission system   ASTRONIC	√	√	√	√	√	√	=	-	
Transmission system   ASTRONIC LITE	√	√	√	√	√	-	=	√	
CAB climate system   ATC	-	П	_	П	-	_	-	-	

Page 1, 4 total

- 1.  $\checkmark$ : means that the system has this function
- 2. -: means that the system does not have this function
- 3. compared with the last version, the new added function is marked in red color.

Systems	Function								
	ECU information	Read fault codes	Clear fault codes	Read data stream	Actuation test	Programming		Remark	
Vehicle control system   BBM - Configuration 2	√	√	√	√	√	-	√	=	
Tachograph   BVDR	√	√	√	√	-	-	-	=	
Auxiliary system   CDM	√	√	√	√		_	-	_	
Door control system   CDS3	√	√	√	√	-	-	√	-	
Door control system   CDS4	√	√	√	√	-	-	-	=	
Vehicle control system   CTE - Lighting	_	-	_	_	-	-	-	-	
Vehicle control system   CTE - Speed signal	-	-	-	-	-	-	=	=	
Vehicle control system   CTE - Status signal	_	-	-	-	-	-	-	=	
Vehicle control system   CTE - Turn signal	-	-	-	-	-	-	=	=	
Vehicle control system   CTE - Warning signal	-	-	-	-	-	-	=	=	
Vehicle control system   CTE - Wiper	-	-	-	-	-	-	=	=	
Audio/video combi   DAS	√	-	_	_	-	-	-	=	
Instrumentation system   DIP4	√	√	=	=	√	-	√	=	
Instrumentation system   DIP5	√	√	=	=	√	-	=	=	
Engine system   DMCI	√	√	√	√	√	√	-	-	
Tachograph   DTCO	√	√	√	√	-	-	-	-	
Communication system   DTS	√	√	√	√	√	-	=	=	
After treatment system   EAS	√	√	√	√	-	√	=	=	
After treatment system   EAS2	√	√	√	√	=	-	√	=	
Aftertreatment system   EAS-3	√	√	-	√	=	√	-	-	
Brake system   EBS	√	√	√	√	√	-	√	-	
Brake system   EBS2	√	√	√	√	_	_	-	-	

Page 2, 4 total

- 1.  $\checkmark$  : means that the system has this function
- 2. -: means that the system does not have this function
- 3. compared with the last version, the new added function is marked in red color.

Systems		Function								
	ECU information	Read fault codes	Clear fault codes	Read data stream	Actuation test	Programming		Remark		
Brake system   EBS2-CAN	√	√	√	√	-	-	=	=		
Brake system   EBS3	$\checkmark$	√	√	√	_	_	-	-		
Suspension system   ECAS	$\checkmark$	√	√	√	√	_	-	-		
Suspension system   ECAS1	-	-	-	-	-	-	1	-		
Suspension system   ECAS2 6x2	√	√	√	-	_	_	-	-		
Suspension system   ECAS2 4x2	_	-	_	-	_	_	-	-		
Suspension system   ECAS2 Xx2	√	√	√	√	√	-	ı	-		
Suspension system   ECAS3	√	√	√	√	√	-	√	-		
Suspension system   ECAS4	√	√	√	√	√	-	ı	√		
Engine system   ECSDC3	-	√	√	√	-	-	√	-		
Engine system   ECSDC4	-	√	√	√	-	-	-	-		
Engine system   ECSDC5	√	√	√	√	√	_	-	√		
Engine system   ECSDC6	√	√	√	√	-	√	ı	-		
Engine system   EGAS	-	-	-	-	-	-	=	=		
Lighting system   ELC Configuration 2	√	√	√	√	√	-	ı	-		
Steering control system   EMAS	√	√	√	√	√	-	ı	-		
Retarder system   EST15	-	-	-	-	-	-	=	=		
Retarder system   EST32	-	=	-	=	-	-	=	=		
Retarder system   EST41	√	√	√	√	-	=	=	=		
Retarder system   EST42	-	-	=	=	-	-	=	=		
Retarder system   EST52	√	√	√	√	√	-	√	-		
Retarder system   EST54	-	-	-	-	-	-	=	=		

Page 3, 4 total

- 1.  $\checkmark$ : means that the system has this function
- 2. -: means that the system does not have this function
- 3. compared with the last version, the new added function is marked in red color.

	Function									
Systems	ECU information	Read fault codes	Clear fault codes	Read data stream	Actuation test	Programming		Remark		
Security system   IMMO	√	√	√	П	-	-	√	=		
CAB climate system   ITC	-	_	_	-	-	_	ı	-		
Safety system   LDWS	√	√	√	-	-	_	ı	-		
Safety system   LDWS-3	-	_	_	-	-	_	ı	-		
Tachograph   MTCO	√	√	√	√	_	_	√	-		
Predictive Cruise Control   PCC	√	√	√	-	-	_	ı	-		
Engine system   PCI	√	√	√	√	-	√	ı	-		
Engine system   PMCI2	√	√	√	√	_	_	-	-		
Steering control system   RASEC	√	√	√	√	-	_	ı	-		
Smart Air Supply Control   SAC	√	√	√	<b>√</b>	1	-	1	_		
Vehicle control system   SWS	-	√	√	√	_	_	-	-		
Communication system   TELEPHONE	√	√	√	<b>√</b>	1	-	√	=		
Communication system   TELEPHONE2	√	√	√	√		_	ı	_		
Engine system   UPEC	√	√	√	<b>√</b>	√	-	√	_		
Vehicle control system   VIC - Lighting	√	√	√	√	√	√	√	=		
Vehicle control system   VIC2 - Lighting and General	√	√	√	√	√	√	√	-		
Vehicle control system   VIC2 LITE - Lighting and General	√	√	√	-	=	=	=	=		
Vehicle control system   VIC3 - Lighting and General	√	√	√	√	√	-	=	-		
Vehicle control system   VIC3 LITE - Lighting and General	√	√	√	√	√	=	=	=		
Retarder system   VOITH	√	√	√	√	-	=	=	-		
Service Light Reset(SLR)   Reset service-Diagnose	√	√	√	-	=	√	=	=		